

Gravatt, Dan

From: Kiefer, Robyn V NWK <Robyn.V.Kiefer@usace.army.mil>
Sent: Friday, September 05, 2014 5:58 PM
To: Gravatt, Dan; Field, Jeff; Peterson, Mary; Washburn, Ben
Cc: Leibbert, Jason M NWK; Donakowski, Joseph NWK; Hays, David C NWK; Petersen, Michael MVS
Subject: Revised Risk Slides for CAG meeting (UNCLASSIFIED)
Attachments: USACE Risk Presentation for CAG Meeting on 8 Sep 2014 .ppt; USACE Risk Presentation for CAG Meeting on 8 Sep 2014 .pdf

Classification: UNCLASSIFIED

Caveats: NONE

All:

See attached revised risk slides for Monday's CAG. Revisions were made based upon a review by someone who wasn't involved in slide preparation to ensure that the messaging was clear.

Edits were made to the following:

Slide 16, third bullet added text at the end

Slide 17, graphic removed (was deemed as confusing by reviewers), language on slide revised

Slide 20, calculations were changed from +/- to + only (since that is what we were showing)

If we need to tweak the slides, we can do so before the presentation.

Thanks,
Robyn

Robyn Kiefer
Project Manager
U.S. Army Corps of Engineers
Phone: 816-389-3615
Cell: 816-803-5730

Classification: UNCLASSIFIED


Caveats: NONE





Radiation Risk in Perspective

USACE-NWK

8 September 2014

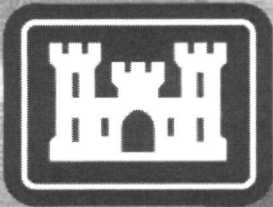


®

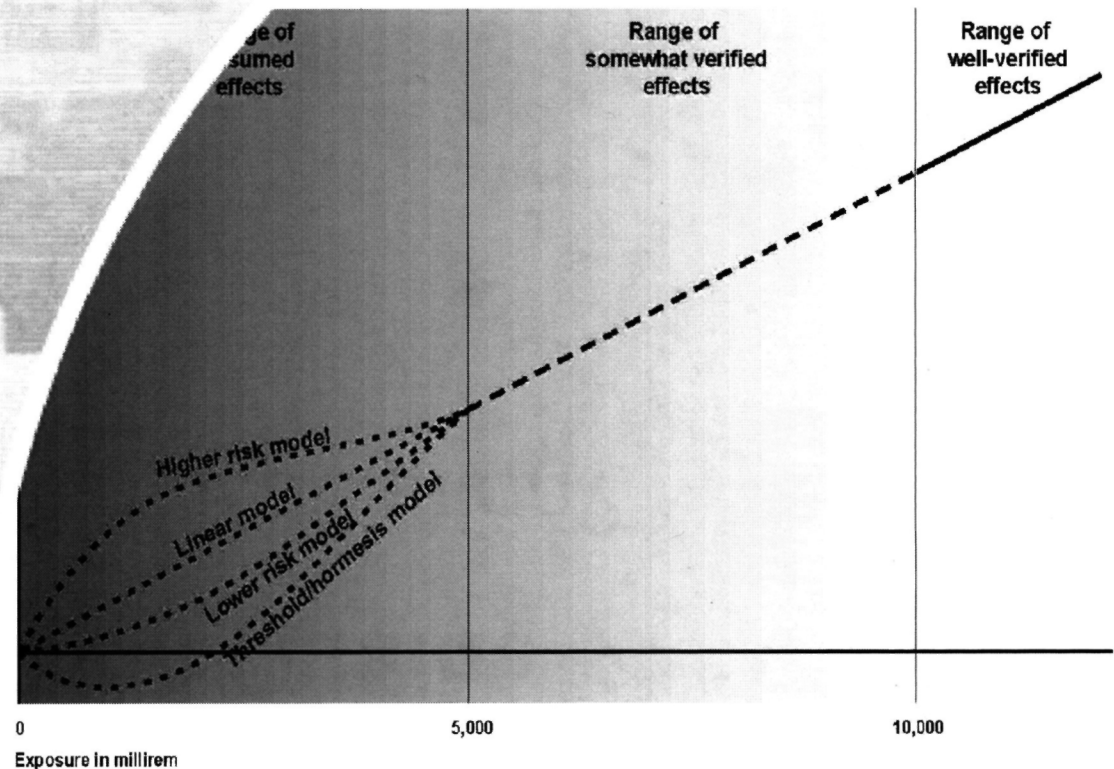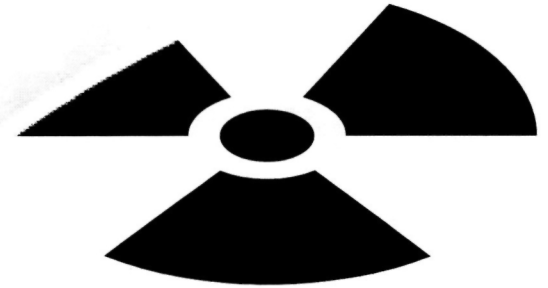

Discussion Outline


- What is a safe level of Radiation?
 - ▶ Radiation Basics
 - ▶ Dose vs. Risk Models
 - ▶ Regulatory Approach

- How is it determined if a site requires remediation?
 - ▶ Risk Assessments
 - ▶ How Remediation Goals are Determined
 - ▶ Preliminary Remediation Goals







Radiation Basics

- **Radio“activity”** is the number of atoms decaying per time
 - ▶ For very low contaminated sites, units are picoCuries (pCi)
 - ▶ 1 pCi = 2.22 atoms decaying per minute
- Atoms decay by releasing energy and/or particles
 - ▶ When the particles hit us, energy is imparted
 - ▶ Results in exposure
- **Dose** is a measure of the impact of exposure
 - ▶ For very low contaminated sites units are millirems (mrem)
- **Risk** is a unit less value that expresses the chance of harmful effects resulting from exposure
 - ▶ At Superfund sites, risk is the chance that chemicals from a site will cause health and/or ecological problems.
- Dose relates to risk: generally, the higher the dose, the higher the risk

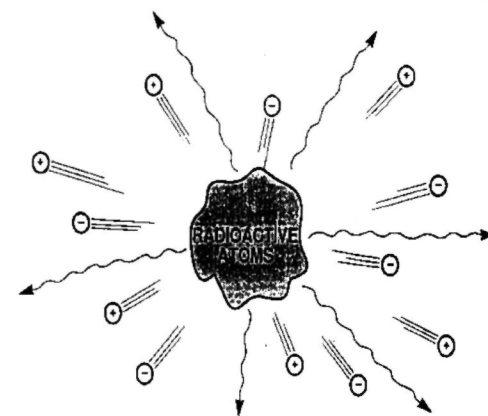


Radiation Sources

- Natural radiation is all around us
 - ▶ Cosmic photons and particles from the sun
 - ▶ Terrestrial materials in the earth's crust
 - ▶ Foods we eat
 - ▶ Internal in the body
 - ▶ In the air we breathe
 - ▶ In the water we drink
- Man made (non medical) radiation is a small fraction of our exposure

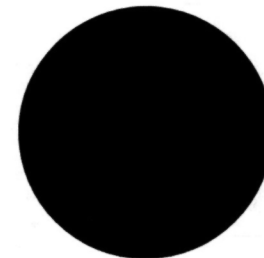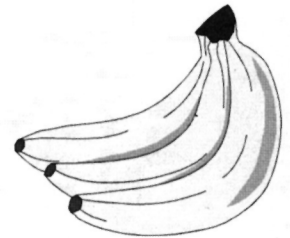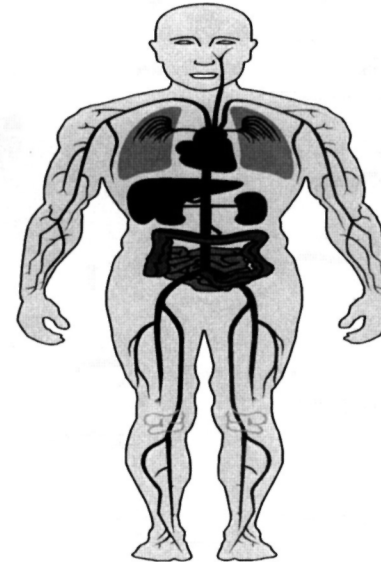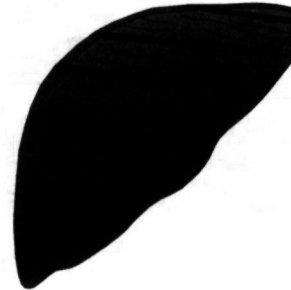


Radiation Exposure in the United States

- Everyone is exposed to radiation every day
- We are exposed to approximately 620 mrem per year
- Without medical dose, the average dose in St Louis area is approximately 340 mrem per yr

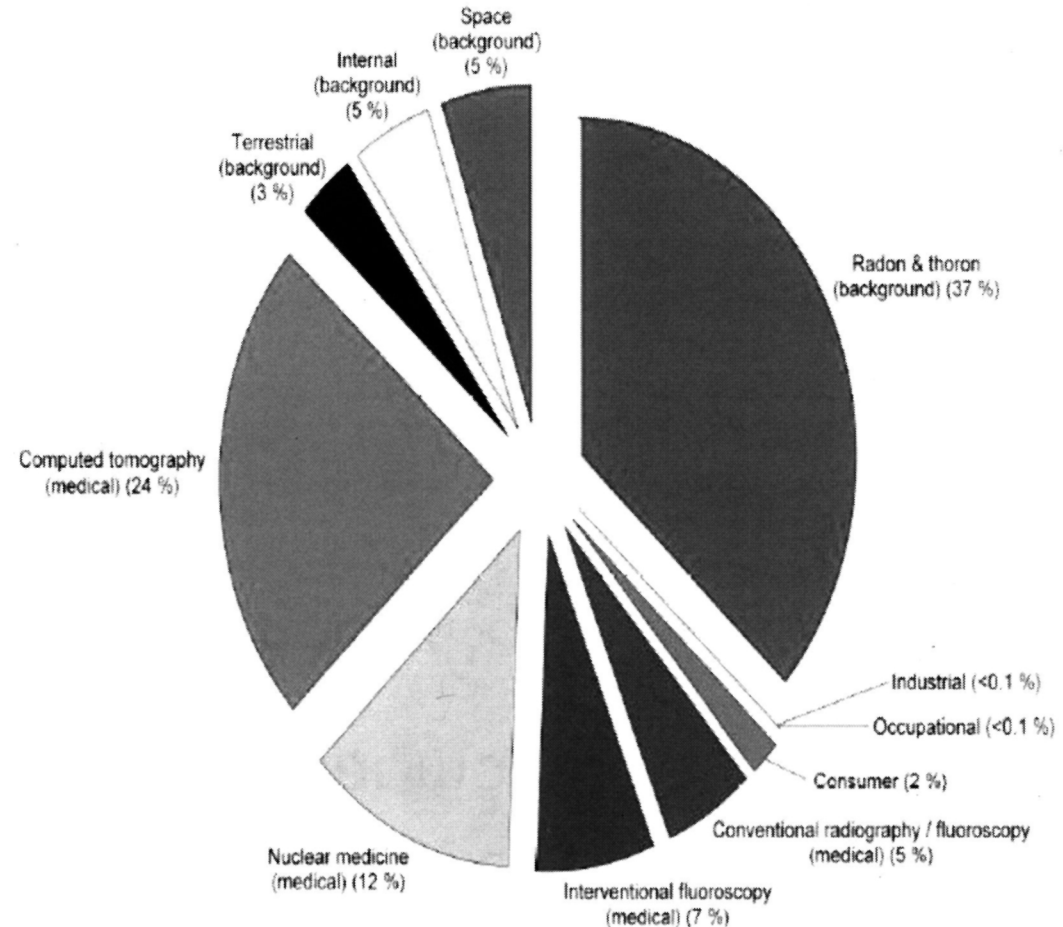

Dose to Risk Models

- We are exposed to radiation constantly, but what is safe?
- Several models estimate the dose to risk relationship
- Regulations are based on the linear model

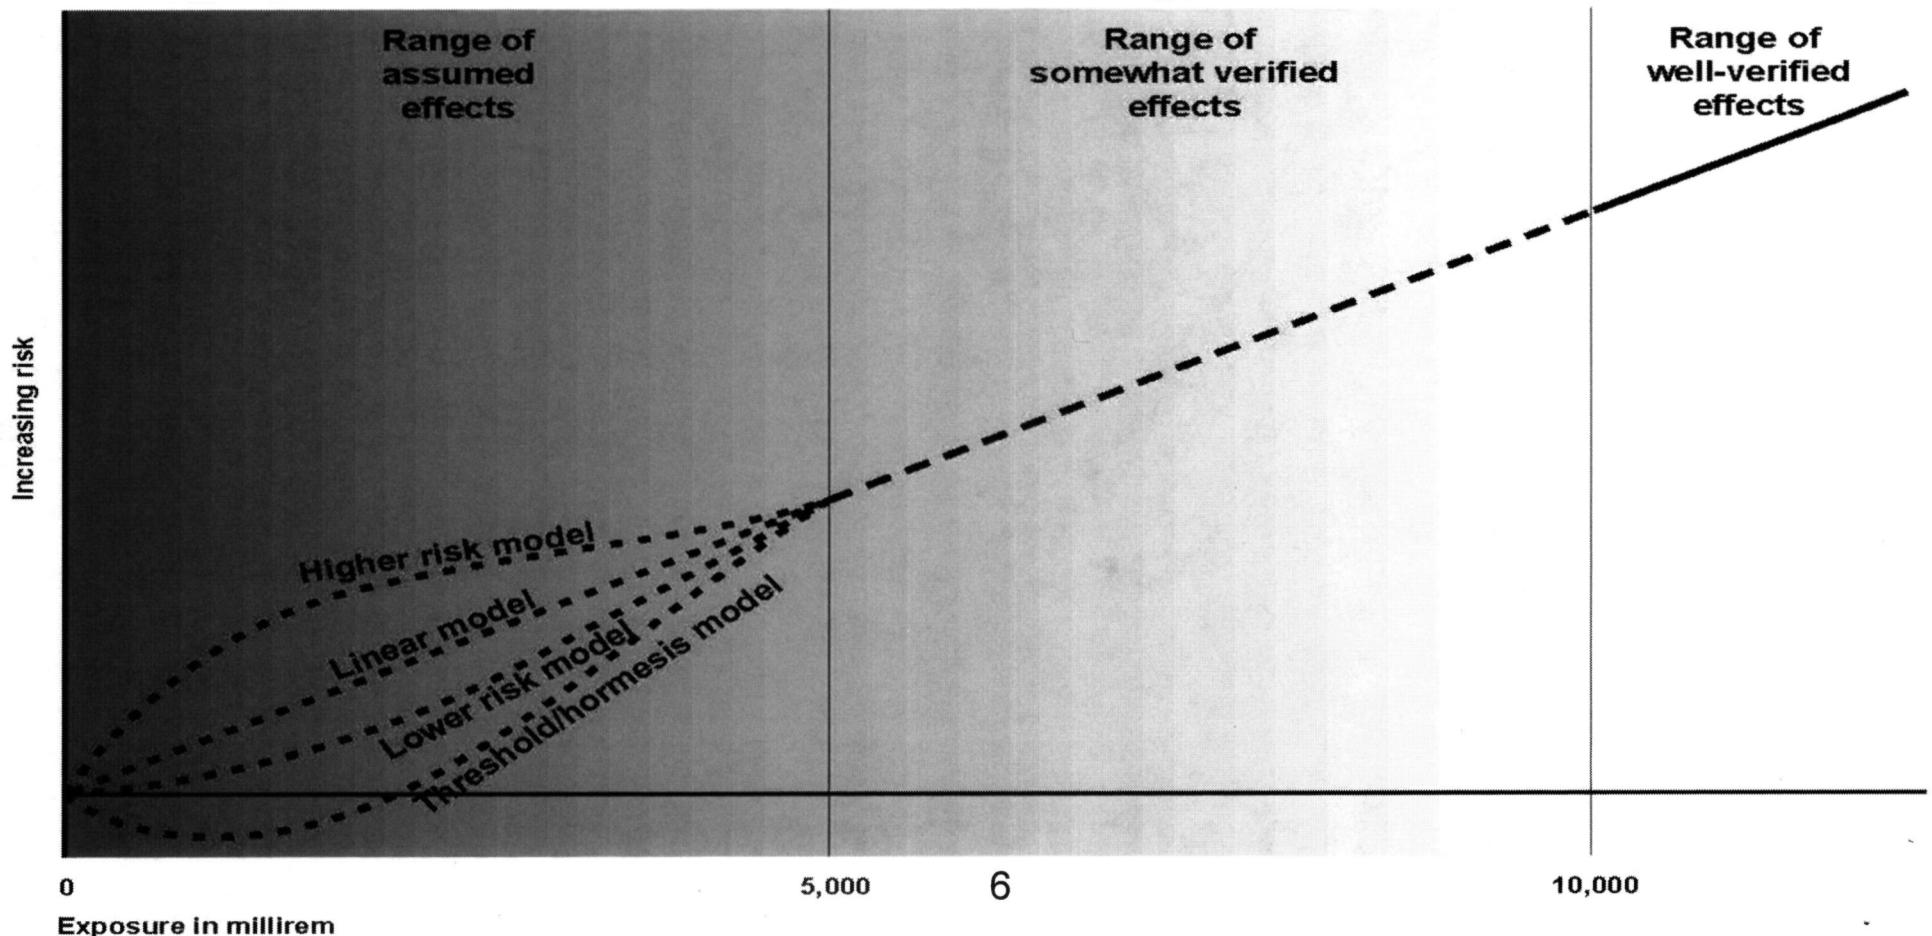

Regulatory Approach


- The regulatory approach is based on the linear (no threshold) dose model
 - ▶ Conservative (likely overestimates risk)
 - ▶ Assumes a dose of radiation has the potential to cause an equivalent increase in risk
- EVERYTHING (driving, flying, smoking, etc.) carries some level of risk
- Regulations for hazardous waste sites refer to acceptable risk, not “safe” levels



Regulatory Approach



- 40 CFR 300.430(e) sets the (CERCLA) acceptable risk range for hazardous and radioactive waste sites
 - ▶ Carcinogen (Radionuclides) Acceptable Risk Range: 1 in 10,000 to 1 in 1,000,000 lifetime increase in cancer risk (note: risk of getting cancer not risk of death)
 - ▶ Chance of getting cancer is now roughly 1 in 2 for males and 1 in 3 for females
- Compare to risk of death:
 - ▶ Cancer 1 in 4(M) 5(F)
 - ▶ Driving (St. Louis) 1 in 10,000

Lifetime Risk of Cancer Incidence

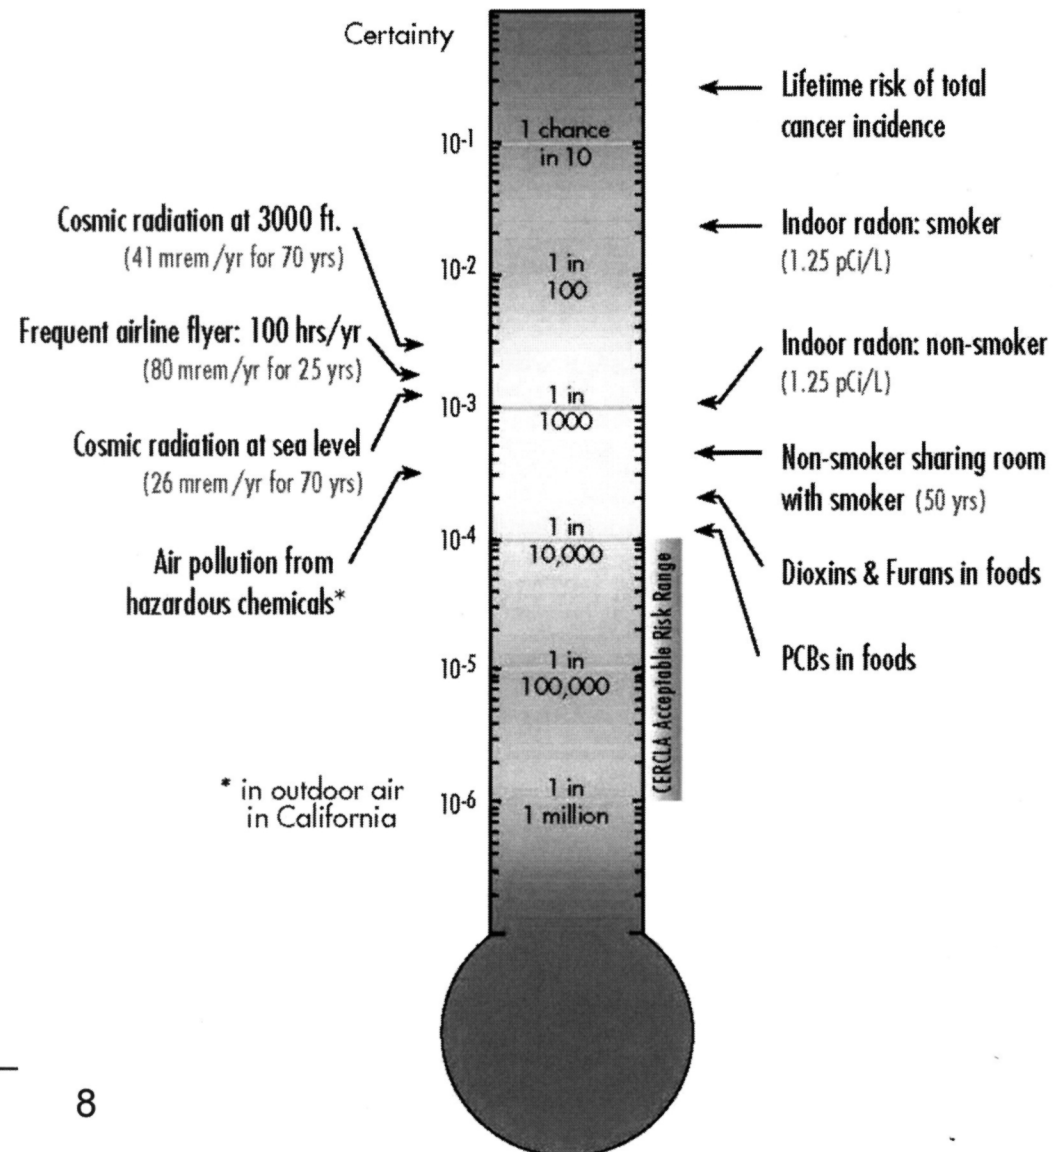


Recap of Key Points

- Everyone is exposed to radiation every day
- Regulations are conservatively based to ensure safety
- Regulatory approach is to state in terms of “acceptable risk”
- Acceptable risk range: 1 in 10,000 to 1 in 1,000,000 additional cancer risk (also referred to as 1×10^{-4} to 1×10^{-6})

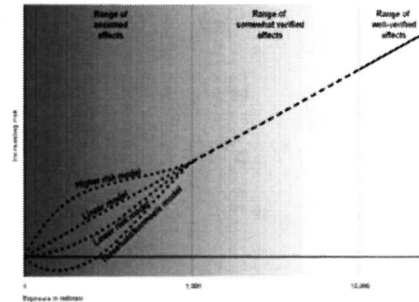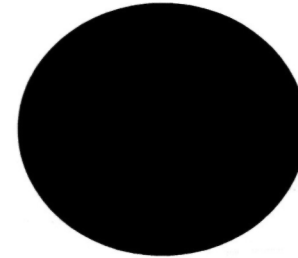

Lifetime Risk of Cancer Incidence

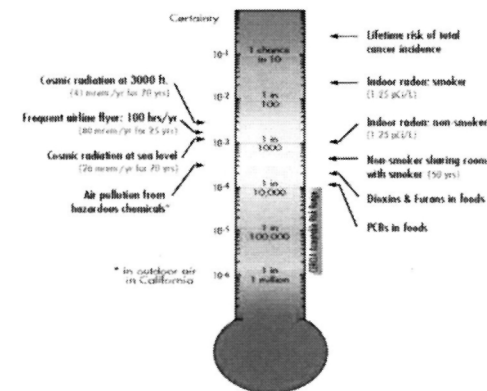


How is it Determined if a Site Requires Remediation?

- Hazardous waste regulations require a Health-Based Risk Assessment be performed and used to make decisions for addressing contamination at the site
- Risk Assessments:
 - ▶ Determine: Is there a risk? Who is at risk? How great is the risk? and What is causing the risk?
 - ▶ Evaluate all exposure scenarios:
 - Contaminants of concern (chemical and radiological)
 - Media of concern (soil, ground water, surface water, air, dusts, etc.)
 - Receptors (residents, workers, trespassers, ecological, etc.)
 - Exposure Pathways (inhalation, direct contact, ingestion, etc.)
- If risks exceed 1 in 10,000, action may be required
 - ▶ Engineering Controls
 - ▶ Land Use Controls
 - ▶ Remediation



Examples of Exposure Pathways

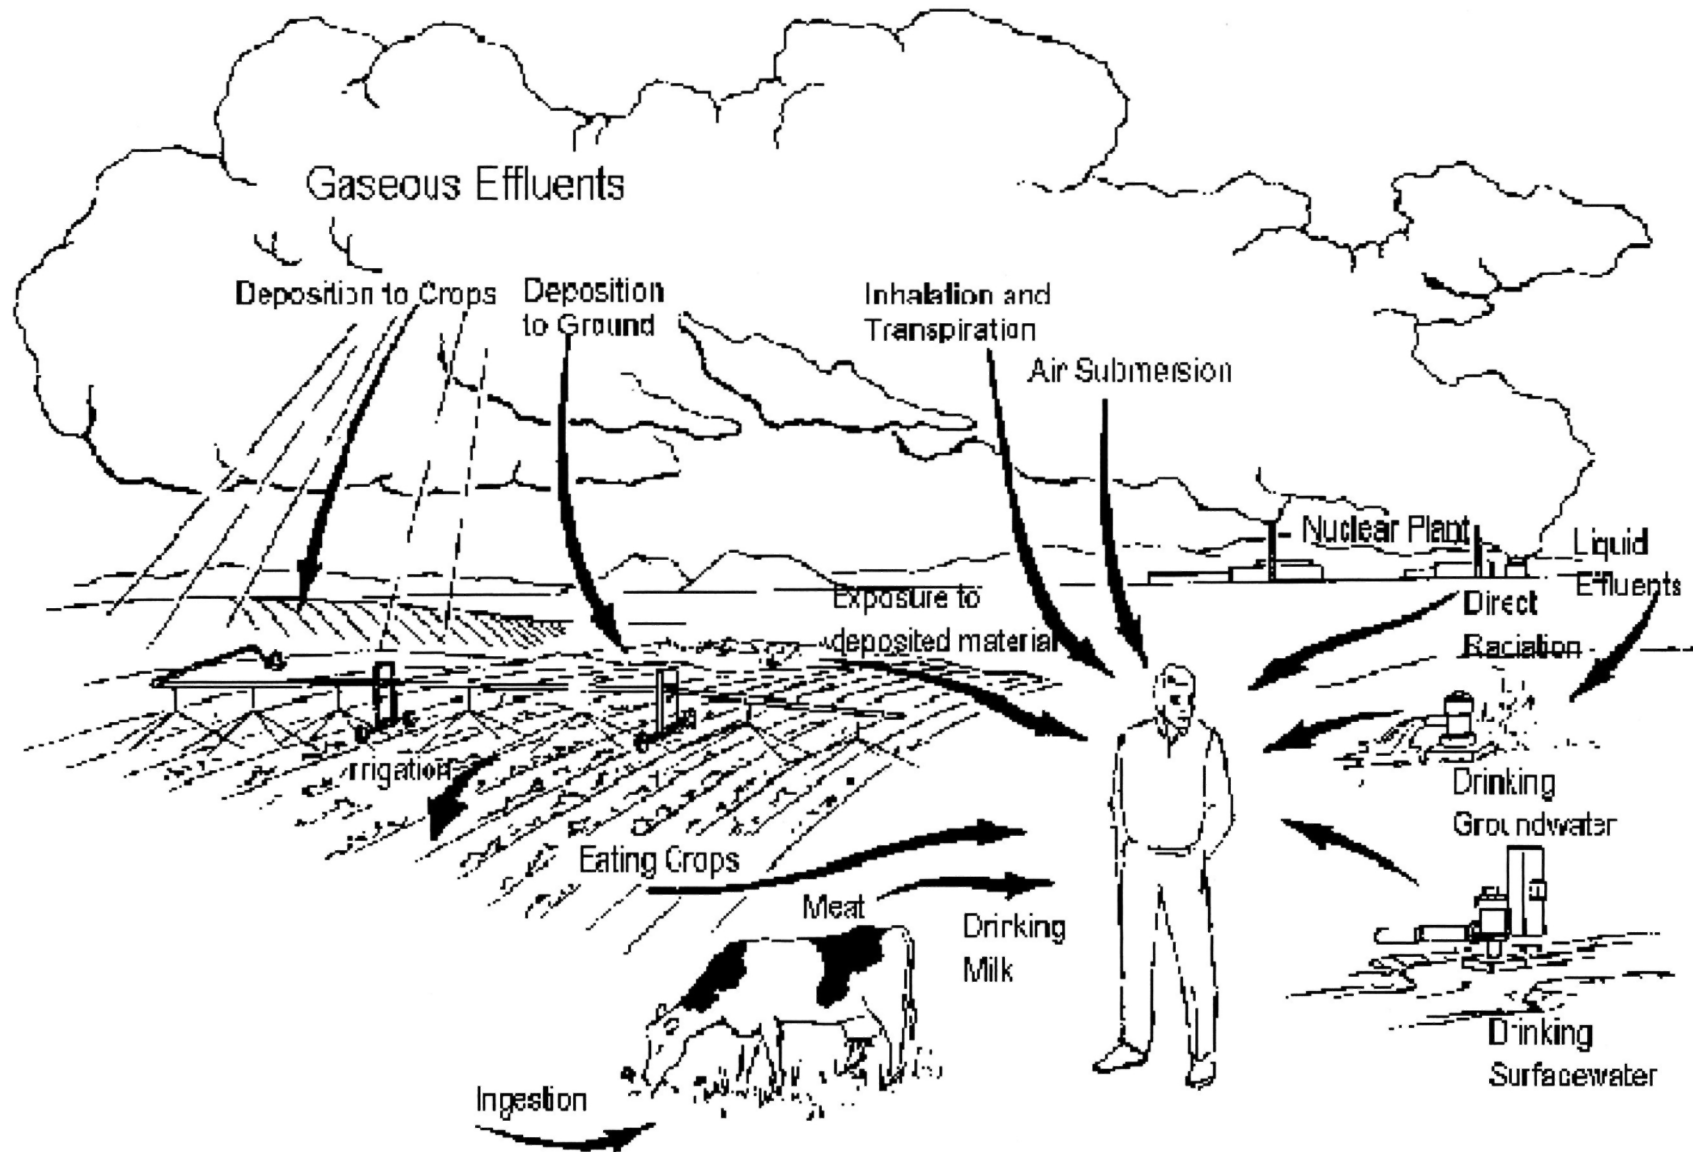

Determining Risk

- Only complete exposure pathways are considered
 - ▶ If groundwater is not used (in impacted area), no complete pathway
 - ▶ If surface soils not contaminated, off-site exposure due to dust inhalation is not a concern
- All land uses are considered (current and future)
- Evaluate carcinogens and non-carcinogens (utilize hazard quotients for non cancer causing effects)
- Conservative assumptions are built in to the variables used in risk assessment calculations
 - ▶ Conservative assumptions in risk assessments tend to overestimate risk



Example Risk Assessment Exposure Scenario

- **Current Conditions**
 - ▶ Contaminants (Uranium, Thorium, Radium)
 - ▶ Media impacted (surface soils)
 - ▶ Site security, fenced
 - ▶ Land use controls (no residential, no use of ground water)
 - ▶ Lab data and modeling results indicate no off-site inhalation receptors
- **Potential Receptors**
 - ▶ Current: Groundskeeper, security staff, trespasser
 - ▶ Future: Groundskeeper, recreational user, trespasser, commercial user, construction worker, adjacent building user, outdoor storage worker
- **Potentially Complete Exposure Pathways**
 - ▶ Inhalation of fugitive dust and radon
 - ▶ Incidental ingestion of soil
 - ▶ Dermal contact with soil
 - ▶ External radiation exposure from contaminated soil



Example Risk Calculation

- For each receptor, chemical, and exposure pathway, risk calculations are performed
- Simplified example calculation for Cancer Risk due to inhalation:

$$C_{\text{exposure pt}} = C_{\text{Air}} \times (\text{IR}/\text{BW}) \times (\text{ET} \times \text{EF} \times \text{ED}) / \text{AT}$$

$$\text{Increased Cancer Risk} = \text{IUR} \times C_{\text{exposure pt}}$$

C=concentration (actual)

AT=averaging time (d)

IR=inhalation rate (m3/hr)

ET=exposure time (hr/d)

ED=exposure duration (yrs)

BW=body weight (kg)

EF=exposure frequency (d/yr)

IUR=Inhalation Unit Risk

- Complete all calculations, calculate the total risk for each receptor and pathway. Sum all calculated risks.
- If Total Cancer Risk $> 1 \times 10^{-4}$, action may be required



West Lake

- Baseline Risk Assessment conducted in 2000 (OU1 Area 1, Area 2, Ford Property)
 - ▶ Carcinogens (including radionuclides & daughters)
 - ▶ Non Carcinogens
 - ▶ 1000 year study period, includes decay & in-growth
 - ▶ Per Risk Assessment Report
 - No exposure to off site receptors
 - Future risk for groundskeeper and outside storage worker exposures exceeded 1 in 10,000 risk

- Risk to be addressed through remedy



How are Remediation Goals Determined?

- Remediation Goals (RG) are sometimes referred to as clean up level, remedial action criteria, etc.
- RGs are primarily determined based on regulation or risk
 - ▶ Regulation may set acceptable RG level (may not be based on risk)
 - RGs set by regulations are considered protective
 - Examples: Maximum Contaminant Levels for drinking water and UMTRCA
 - ▶ Risk-based RGs are established to result in a target risk within the CERCLA risk range
- RGs are contaminant and media specific concentrations that demonstrate compliance with the remedial action objective of keeping risk within the CERCLA acceptable risk range



Impact of Background Levels on RGs

- When a constituent is not naturally occurring, there is no “background” concentration
- When a constituent is naturally occurring (ex: naturally occurring radioactive material), that naturally occurring amount is the “background” concentration
- Naturally occurring constituents are typically not remediated, therefore, the background concentrations are added to the RGs



Impact of Levels Background on RGs

- Although often presented as a single value, Background varies and is a range. It should not be thought of as a single value.

| Nation | U238 (pCi/g) | | Ra226 (pCi/g) | | Th232 (pCi/g) | |
|---------------|--------------|---------------|---------------|---------------|---------------|---------------|
| | Mean | Typical Range | Mean | Typical Range | Mean | Typical Range |
| United States | 0.9 | 0.1 - 3.8 | 1.1 | 0.2 - 4.3 | 0.9 | 0.1 - 3.5 |
| Missouri | 1.1 | 0.3 - 1.7 | 1.1 | 0.3 - 1.4 | 1.0 | 0.3 - 1.3 |
| Ohio | 1.4 | 0.8 - 2.2 | 1.5 | 0.8 - 2.5 | 1.0 | 0.7 - 1.5 |
| Russia | 0.5 | 0 - 1.8 | 0.7 | 0 - 2.1 | 0.8 | 0.1 - 2.1 |
| Greece | 0.7 | 0 - 6.5 | 0.7 | 0 - 6.5 | 0.6 | 0 - 5.1 |
| West Lake | 1.3 | 0.74-1.85 | 1.1 | 0.95-1.19 | 0.9 | 0.52-1.26 |



Different Sites Can Have Different RGs

- This is due to factors that impact how the RGs are determined:
 - ▶ Regulatory authority
 - ▶ Radiation standards / ARARs
 - ▶ Health assessment approaches
 - ▶ Land uses / exposure scenarios
 - ▶ Input parameters
 - ▶ Physical settings



West Lake

■ West Lake Background (mean + 2σ):

- ▶ Ra-226 $1.06 + 0.24 \text{ pCi/g} = 1.30 \text{ pCi/g}$ (Missouri mean + 2σ: 1.7 pCi/g)
- ▶ Th-232 $0.9 + 0.66 \text{ pCi/g} = 1.56 \text{ pCi/g}$ (Missouri mean + 2σ: 1.6 pCi/g)
- ▶ Ra-226 + Th-232 = $2.86 \approx 2.9 \text{ pCi/g}$ (Missouri Ra+Th = 3.3 pCi/g)

■ Remediation Goal:

- ▶ ARAR UMTRCA: 5 pCi/g + Background (Ra226, Th232)
- ▶ UMTRCA goal is for residential use*
- ▶ Background (95% UCL): 2.9 pCi/g
- ▶ Derived Remediation Goal*: Ra-226 & Th-232: 7.9 pCi/g

* Use of UMTRCA residential remediation goal is conservative for West Lake, given land use restrictions that prevent residential use



What are Preliminary Remediation Goals (PRGs)?

- PRGs are used when first investigating a site to determine if additional investigation is needed (BMAC)
- Very conservative screening levels
- Follow the CERCLA acceptable risk range of excess cancer incidence rate of 1 in 1,000,000



Relative Risks for Comparison

- For comparison, some other lifetime risk factors
 - ▶ Death from heart disease ~ 1 in 6
 - ▶ Death from falls ~ 1 in 160
 - ▶ Death from storms ~ 1 in 30,000
 - ▶ Death from earthquake or landslide ~ 1 in 100,000
 - ▶ Death from lightning ~ 1 in 130,000
 - ▶ Death from food poisoning ~ 1 in 600,000
 - ▶ Death from accidental fireworks discharge ~ 1 in 650,000

* Source = National Center for Health Statistics 2008 Mortality Data



PRGs vs. RGs

PRGs

- Preliminary, not final
- Contaminant and media specific
- Risk based (generic scenarios)
- Usually do not consider
 - ▶ Site specifics
 - ▶ Technical Feasibility
 - ▶ Schedule
 - ▶ Resources
 - ▶ Costs
 - ▶ Regulations
 - ▶ Background
- Used as screening
- Very Conservative

RGs

- Final Remediation Goal
- Contaminant and media specific
- Must consider
 - ▶ Site Specifics
 - ▶ Technical Feasibility
 - ▶ Resources
 - ▶ Regulations (may not be risk based)
 - ▶ Risk
- Used to determine if site meets remedial action objectives



Summary

- Remediation Goals

- ▶ Risk-based (site-specific calculations) or ARARs (regulations)
- ▶ Remediation goals will be different from site to site
- ▶ Background impacts
 - Background levels are ranges, not a single number
 - Vary from site to site

- Preliminary Remediation Goals

- ▶ Screening only, used to determine if additional investigation is required
- ▶ Intended to be very conservative



Summary

- What is a safe level of Radiation?
 - ▶ Radiation exposure occurs every day to every one
 - ▶ Regulations are conservatively based on the assumption that any exposure to radiation results in some risk
 - ▶ Regulatory approach is to state in terms of “acceptable risk”
 - ▶ Regulations define 1 in 10,000 increased chance of getting cancer as “acceptable risk”

- How is it determined if a site requires remediation?
 - ▶ Risk Assessment - who is exposed, what they are exposed to, how much they are exposed to, & how they are exposed
 - ▶ Risk Assessment results > 1 in 10,000 may require action





Questions?



Radiation Risk in Perspective

USACE-NWK

8 September 2014

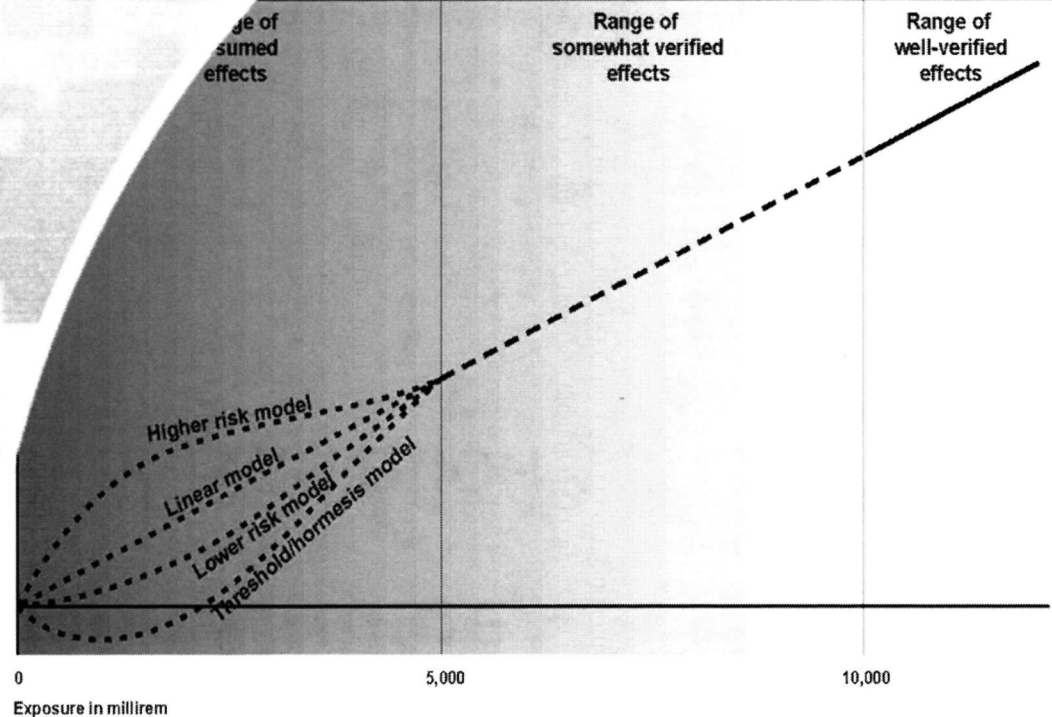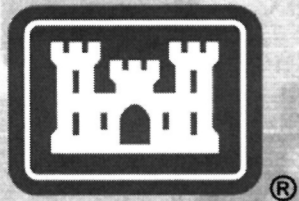

Discussion Outline


- What is a safe level of Radiation?
 - ▶ Radiation Basics
 - ▶ Dose vs. Risk Models
 - ▶ Regulatory Approach

- How is it determined if a site requires remediation?
 - ▶ Risk Assessments
 - ▶ How Remediation Goals are Determined
 - ▶ Preliminary Remediation Goals





Radiation Basics

- **Radio“activity”** is the number of atoms decaying per time
 - ▶ For very low contaminated sites, units are picoCuries (pCi)
 - ▶ 1 pCi = 2.22 atoms decaying per minute
- Atoms decay by releasing energy and/or particles
 - ▶ When the particles hit us, energy is imparted
 - ▶ Results in exposure
- **Dose** is a measure of the impact of exposure
 - ▶ For very low contaminated sites units are millirems (mrem)
- **Risk** is a unit less value that expresses the chance of harmful effects resulting from exposure
 - ▶ At Superfund sites, risk is the chance that chemicals from a site will cause health and/or ecological problems.
- Dose relates to risk: generally, the higher the dose, the higher the risk

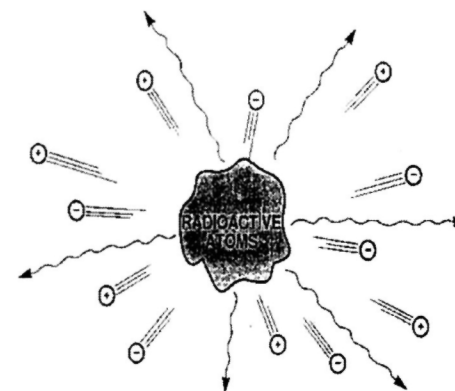


Radiation Sources

- Natural radiation is all around us
 - ▶ Cosmic photons and particles from the sun
 - ▶ Terrestrial materials in the earth's crust
 - ▶ Foods we eat
 - ▶ Internal in the body
 - ▶ In the air we breathe
 - ▶ In the water we drink
- Man made (non medical) radiation is a small fraction of our exposure

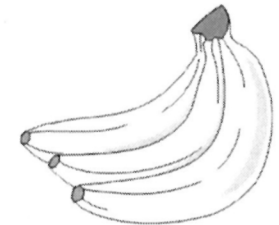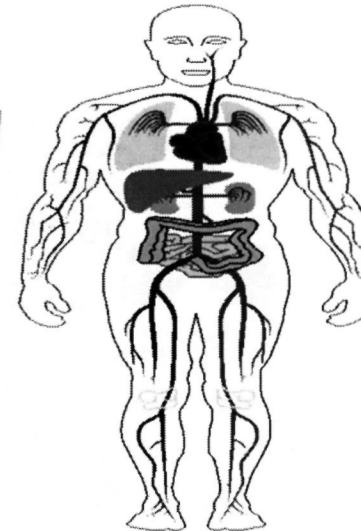


Radiation Exposure in the United States

- Everyone is exposed to radiation every day
- We are exposed to approximately 620 mrem per year
- Without medical dose, the average dose in St Louis area is approximately 340 mrem per yr

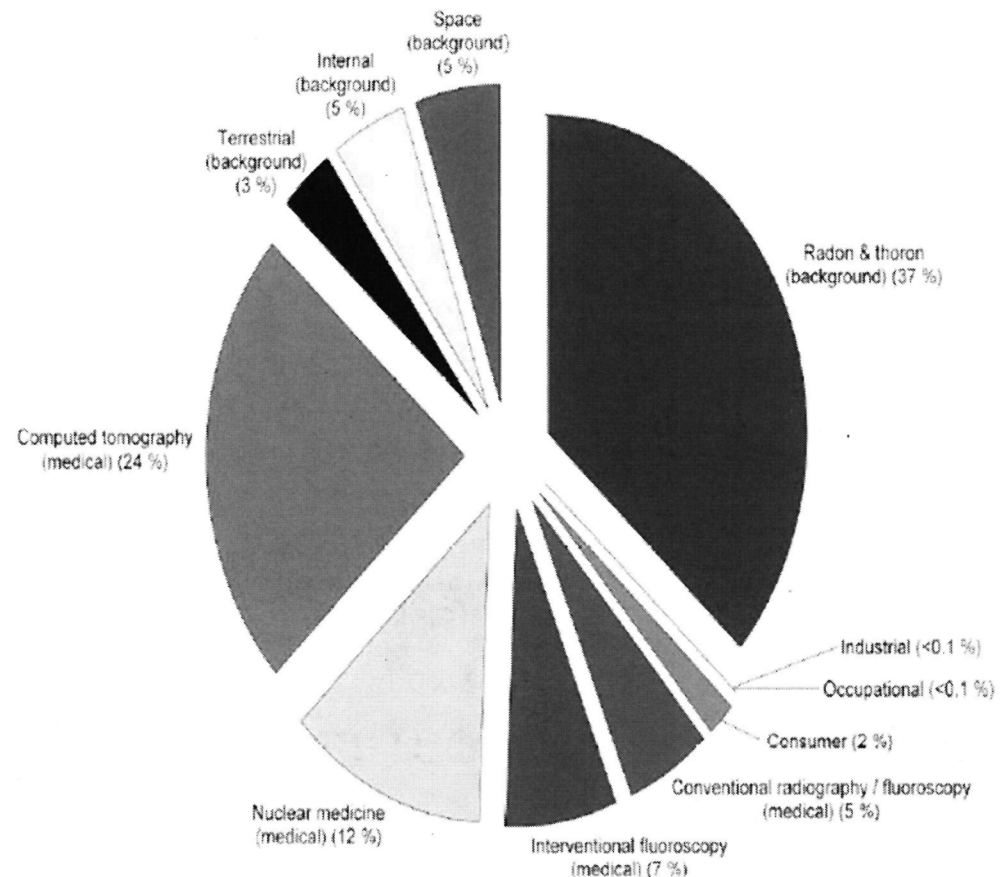

Dose to Risk Models

- We are exposed to radiation constantly, but what is safe?
- Several models estimate the dose to risk relationship
- Regulations are based on the linear model

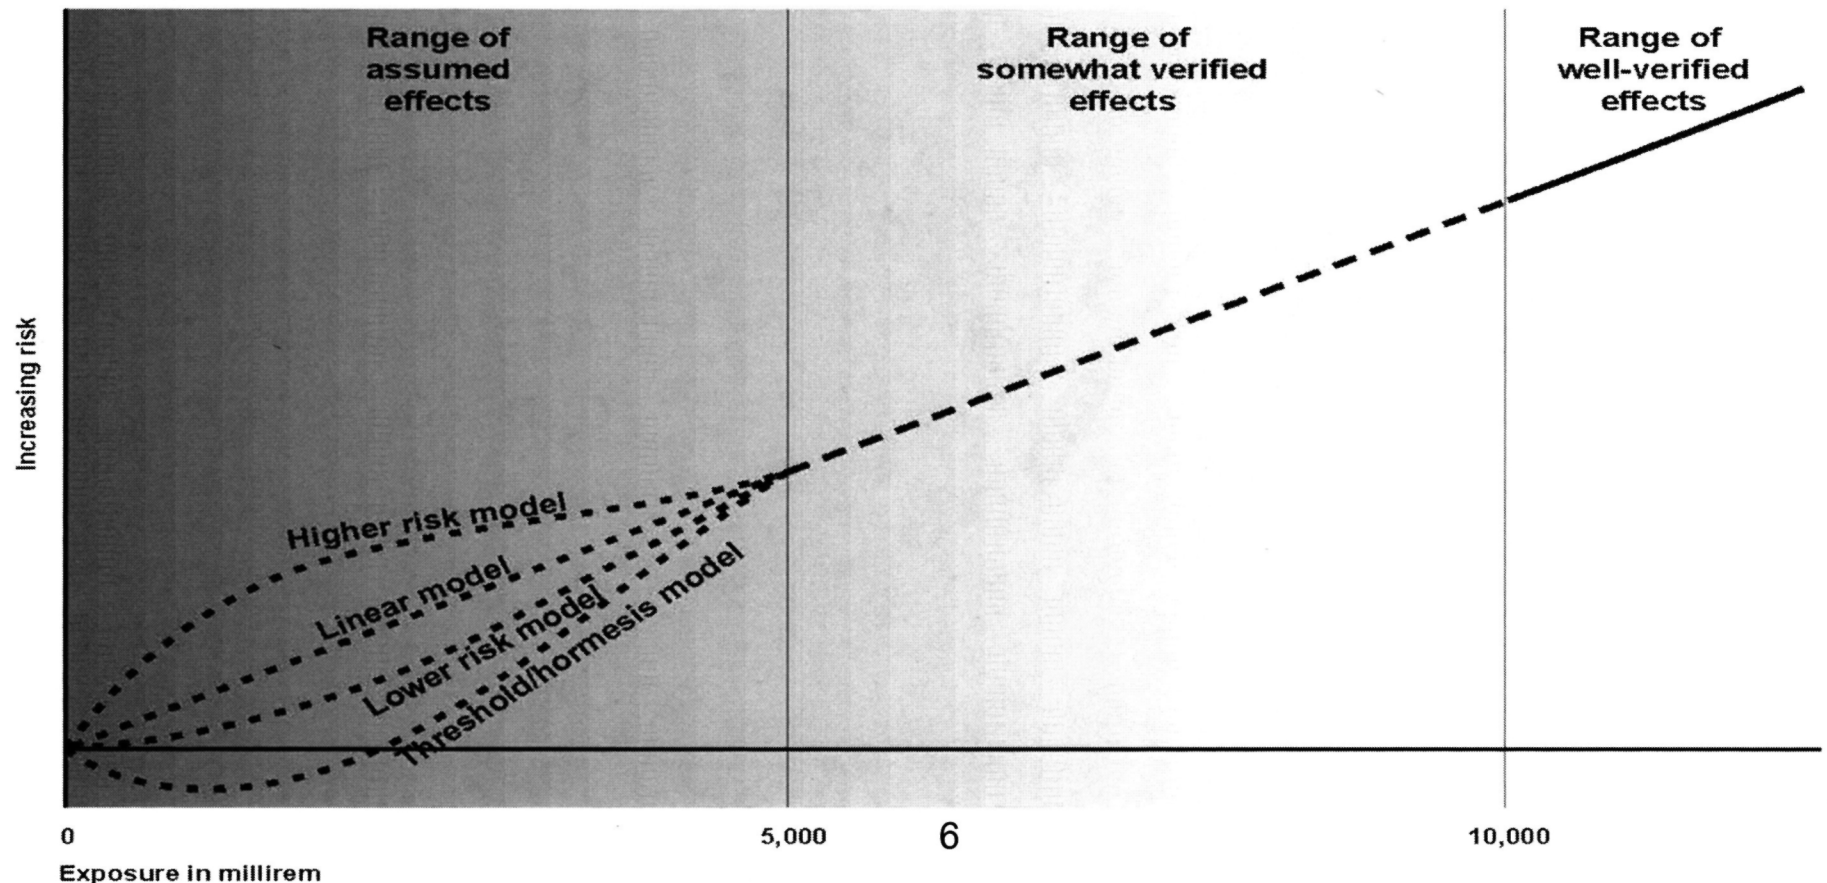

Regulatory Approach


- The regulatory approach is based on the linear (no threshold) dose model
 - ▶ Conservative (likely overestimates risk)
 - ▶ Assumes a dose of radiation has the potential to cause an equivalent increase in risk
- EVERYTHING (driving, flying, smoking, etc.) carries some level of risk
- Regulations for hazardous waste sites refer to acceptable risk, not “safe” levels



Regulatory Approach


- 40 CFR 300.430(e) sets the (CERCLA) acceptable risk range for hazardous and radioactive waste sites
 - ▶ Carcinogen (Radionuclides) Acceptable Risk Range: 1 in 10,000 to 1 in 1,000,000 lifetime increase in cancer risk (note: risk of getting cancer not risk of death)
 - ▶ Chance of getting cancer is now roughly 1 in 2 for males and 1 in 3 for females
- Compare to risk of death:
 - ▶ Cancer 1 in 4(M) 5(F)
 - ▶ Driving (St. Louis) 1 in 10,000

Lifetime Risk of Cancer Incidence

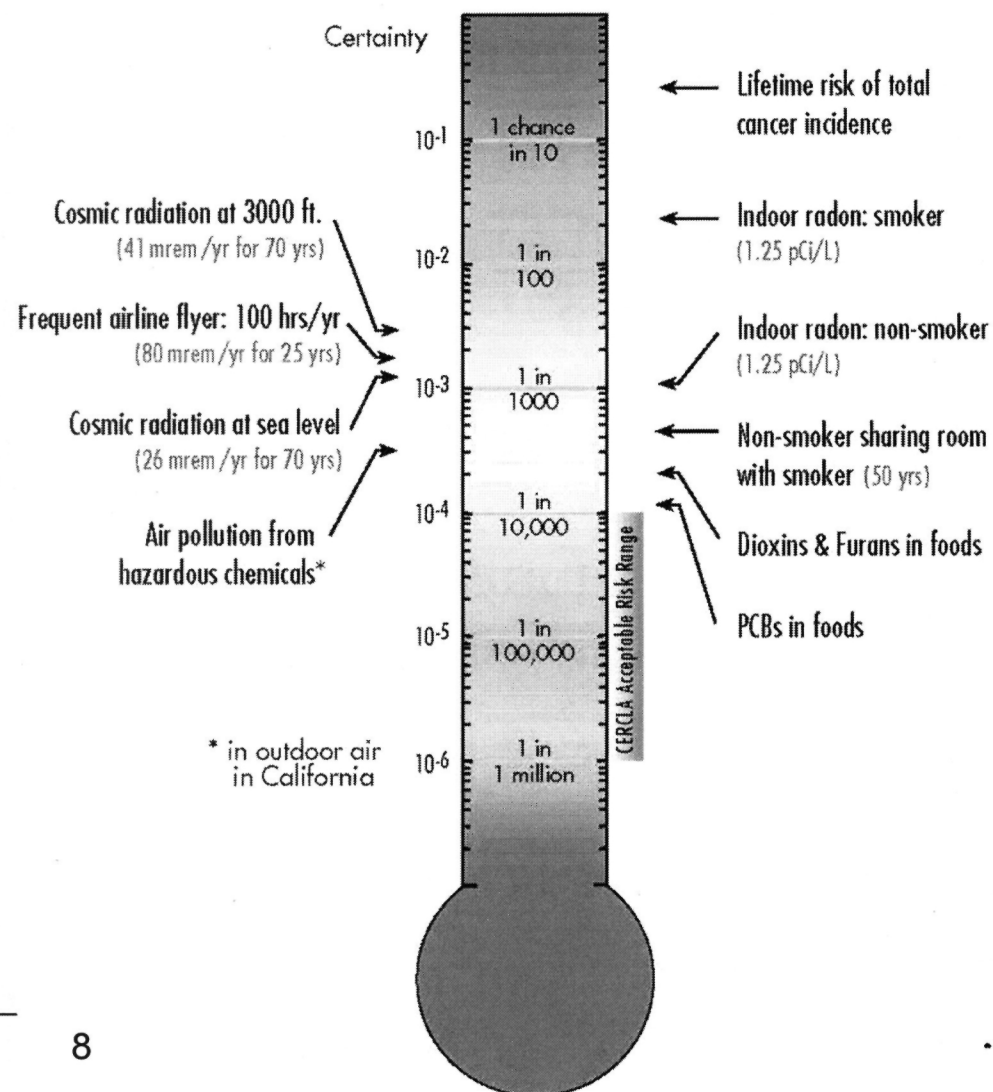


Recap of Key Points

- Everyone is exposed to radiation every day
- Regulations are conservatively based to ensure safety
- Regulatory approach is to state in terms of “acceptable risk”
- Acceptable risk range: 1 in 10,000 to 1 in 1,000,000 additional cancer risk (also referred to as 1×10^{-4} to 1×10^{-6})

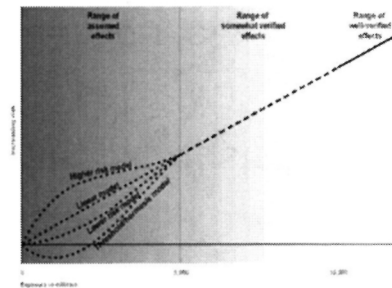

Lifetime Risk of Cancer Incidence

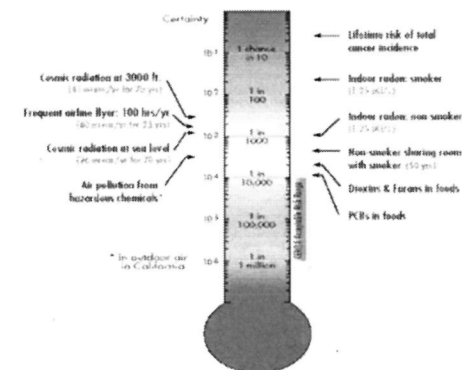


How is it Determined if a Site Requires Remediation?

- Hazardous waste regulations require a Health-Based Risk Assessment be performed and used to make decisions for addressing contamination at the site
- Risk Assessments:
 - ▶ Determine: Is there a risk? Who is at risk? How great is the risk? and What is causing the risk?
 - ▶ Evaluate all exposure scenarios:
 - Contaminants of concern (chemical and radiological)
 - Media of concern (soil, ground water, surface water, air, dusts, etc.)
 - Receptors (residents, workers, trespassers, ecological, etc.)
 - Exposure Pathways (inhalation, direct contact, ingestion, etc.)
- If risks exceed 1 in 10,000, action may be required
 - ▶ Engineering Controls
 - ▶ Land Use Controls
 - ▶ Remediation



Examples of Exposure Pathways

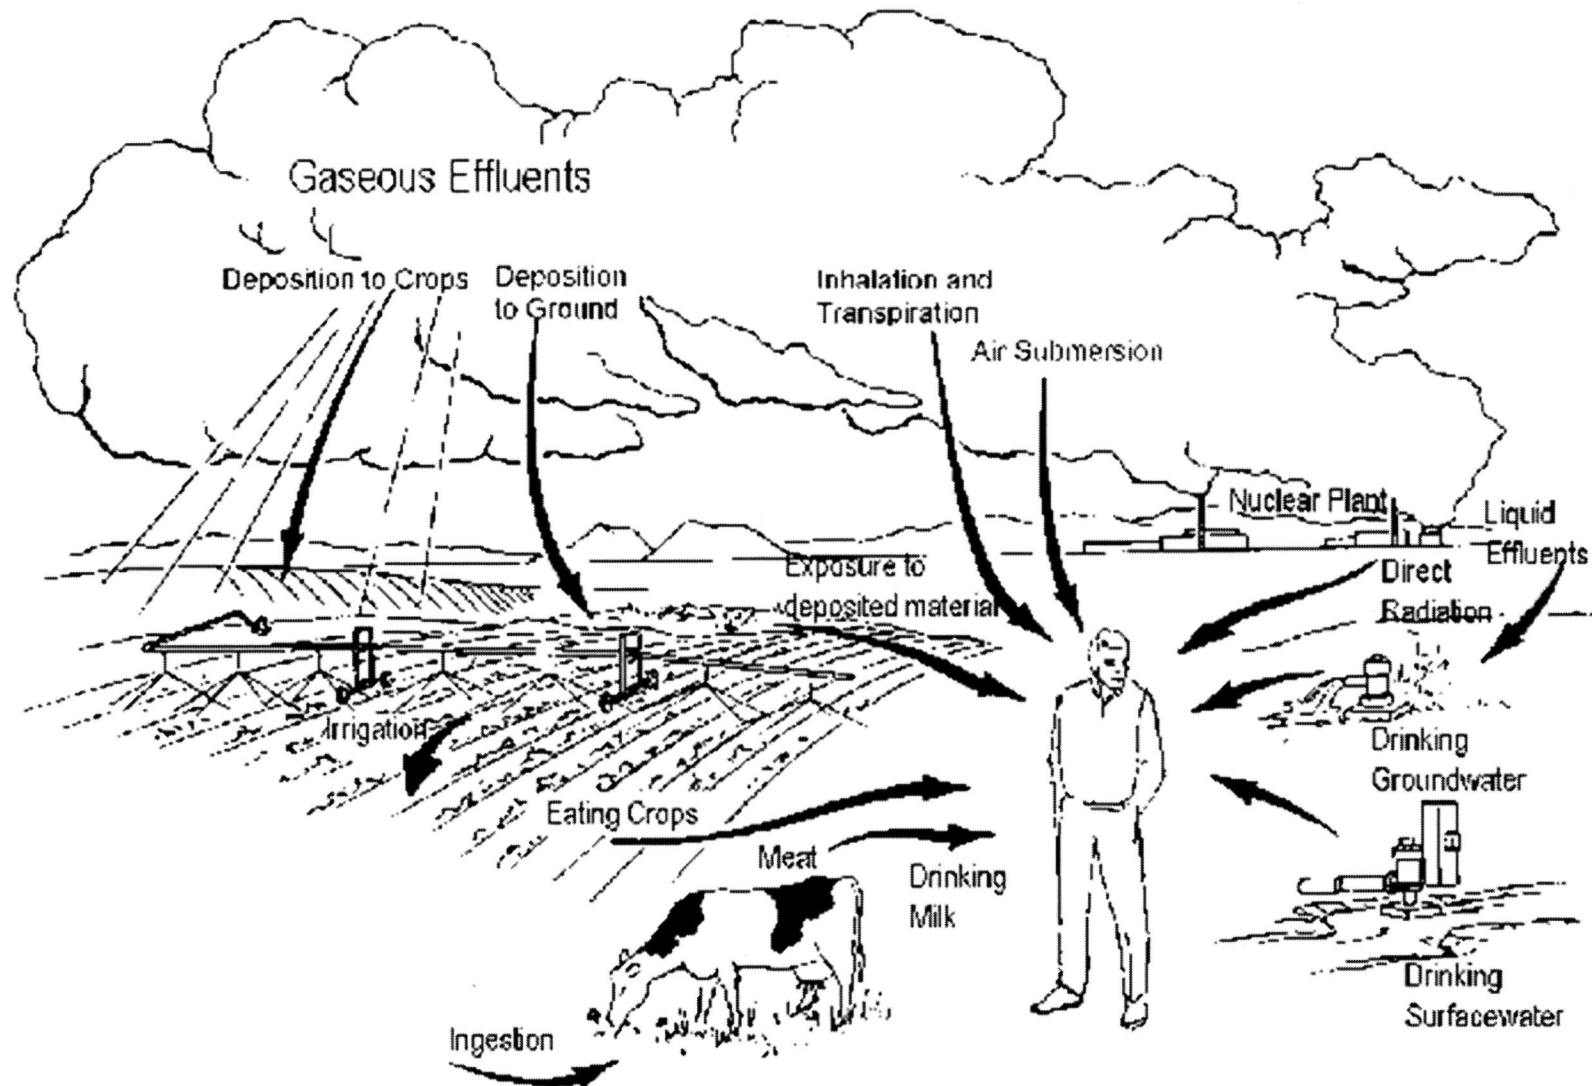

Determining Risk

- Only complete exposure pathways are considered
 - ▶ If groundwater is not used (in impacted area), no complete pathway
 - ▶ If surface soils not contaminated, off-site exposure due to dust inhalation is not a concern
- All land uses are considered (current and future)
- Evaluate carcinogens and non-carcinogens (utilize hazard quotients for non cancer causing effects)
- Conservative assumptions are built in to the variables used in risk assessment calculations
 - ▶ Conservative assumptions in risk assessments tend to overestimate risk



Example Risk Assessment Exposure Scenario

■ Current Conditions

- ▶ Contaminants (Uranium, Thorium, Radium)
- ▶ Media impacted (surface soils)
- ▶ Site security, fenced
- ▶ Land use controls (no residential, no use of ground water)
- ▶ Lab data and modeling results indicate no off-site inhalation receptors

■ Potential Receptors

- ▶ Current: Groundskeeper, security staff, trespasser
- ▶ Future: Groundskeeper, recreational user, trespasser, commercial user, construction worker, adjacent building user, outdoor storage worker

■ Potentially Complete Exposure Pathways

- ▶ Inhalation of fugitive dust and radon
- ▶ Incidental ingestion of soil
- ▶ Dermal contact with soil

- ▶ External radiation exposure from contaminated soil



BUILDING STRONG®

Example Risk Calculation

- For each receptor, chemical, and exposure pathway, risk calculations are performed
- Simplified example calculation for Cancer Risk due to inhalation:

$$C_{\text{exposure pt}} = C_{\text{Air}} \times (\text{IR}/\text{BW}) \times (\text{ET} \times \text{EF} \times \text{ED}) / \text{AT}$$

$$\text{Increased Cancer Risk} = \text{IUR} \times C_{\text{exposure pt}}$$

C=concentration (actual)

AT=averaging time (d)

IR=inhalation rate (m3/hr)

ET=exposure time (hr/d)

ED=exposure duration (yrs)

BW=body weight (kg)

EF=exposure frequency (d/yr)

IUR=Inhalation Unit Risk

- Complete all calculations, calculate the total risk for each receptor and pathway. Sum all calculated risks.
- If Total Cancer Risk > 1×10^{-4} , action may be required



West Lake

- Baseline Risk Assessment conducted in 2000 (OU1 Area 1, Area 2, Ford Property)
 - ▶ Carcinogens (including radionuclides & daughters)
 - ▶ Non Carcinogens
 - ▶ 1000 year study period, includes decay & in-growth
 - ▶ Per Risk Assessment Report
 - No exposure to off site receptors
 - Future risk for groundskeeper and outside storage worker exposures exceeded 1 in 10,000 risk

- Risk to be addressed through remedy



How are Remediation Goals Determined?

- Remediation Goals (RG) are sometimes referred to as clean up level, remedial action criteria, etc.
- RGs are primarily determined based on regulation or risk
 - ▶ Regulation may set acceptable RG level (may not be based on risk)
 - RGs set by regulations are considered protective
 - Examples: Maximum Contaminant Levels for drinking water and UMTRCA
 - ▶ Risk-based RGs are established to result in a target risk within the CERCLA risk range
- RGs are contaminant and media specific concentrations that demonstrate compliance with the remedial action objective of keeping risk within the CERCLA acceptable risk range



Impact of Background Levels on RGs

- When a constituent is not naturally occurring, there is no “background” concentration
- When a constituent is naturally occurring (ex: naturally occurring radioactive material), that naturally occurring amount is the “background” concentration
- Naturally occurring constituents are typically not remediated, therefore, the background concentrations are added to the RGs



Impact of Levels Background on RGs

- Although often presented as a single value, Background varies and is a range. It should not be thought of as a single value.

| Nation | U238 (pCi/g) | | Ra226 (pCi/g) | | Th232 (pCi/g) | |
|---------------|--------------|---------------|---------------|---------------|---------------|---------------|
| | Mean | Typical Range | Mean | Typical Range | Mean | Typical Range |
| United States | 0.9 | 0.1 - 3.8 | 1.1 | 0.2 - 4.3 | 0.9 | 0.1 - 3.5 |
| Missouri | 1.1 | 0.3 - 1.7 | 1.1 | 0.3 - 1.4 | 1.0 | 0.3 - 1.3 |
| Ohio | 1.4 | 0.8 - 2.2 | 1.5 | 0.8 - 2.5 | 1.0 | 0.7 - 1.5 |
| Russia | 0.5 | 0 - 1.8 | 0.7 | 0 - 2.1 | 0.8 | 0.1 - 2.1 |
| Greece | 0.7 | 0 - 6.5 | 0.7 | 0 - 6.5 | 0.6 | 0 - 5.1 |
| West Lake | 1.3 | 0.74-1.85 | 1.1 | 0.95-1.19 | 0.9 | 0.52-1.26 |



Different Sites Can Have Different RGs

- This is due to factors that impact how the RGs are determined:
 - ▶ Regulatory authority
 - ▶ Radiation standards / ARARs
 - ▶ Health assessment approaches
 - ▶ Land uses / exposure scenarios
 - ▶ Input parameters
 - ▶ Physical settings



West Lake

■ West Lake Background (mean + 2σ):

- ▶ Ra-226 $1.06 + 0.24 \text{ pCi/g} = 1.30 \text{ pCi/g}$ (Missouri mean + 2σ: 1.7 pCi/g)
- ▶ Th-232 $0.9 + 0.66 \text{ pCi/g} = 1.56 \text{ pCi/g}$ (Missouri mean + 2σ: 1.6 pCi/g)
- ▶ Ra-226 + Th-232 = $2.86 \approx 2.9 \text{ pCi/g}$ (Missouri Ra+Th = 3.3 pCi/g)

■ Remediation Goal:

- ▶ ARAR UMTRCA: 5 pCi/g + Background (Ra226, Th232)
- ▶ UMTRCA goal is for residential use*
- ▶ Background (95% UCL): 2.9 pCi/g
- ▶ Derived Remediation Goal*: Ra-226 & Th-232: 7.9 pCi/g

* Use of UMTRCA residential remediation goal is conservative for West Lake, given land use restrictions that prevent residential use



What are Preliminary Remediation Goals (PRGs)?

- PRGs are used when first investigating a site to determine if additional investigation is needed (BMAC)
- Very conservative screening levels
- Follow the CERCLA acceptable risk range of excess cancer incidence rate of 1 in 1,000,000



Relative Risks for Comparison

- For comparison, some other lifetime risk factors
 - ▶ Death from heart disease ~ 1 in 6
 - ▶ Death from falls ~ 1 in 160
 - ▶ Death from storms ~ 1 in 30,000
 - ▶ Death from earthquake or landslide ~ 1 in 100,000
 - ▶ Death from lightning ~ 1 in 130,000
 - ▶ Death from food poisoning ~ 1 in 600,000
 - ▶ Death from accidental fireworks discharge ~ 1 in 650,000

* Source = National Center for Health Statistics 2008 Mortality Data



PRGs vs. RGs

PRGs

- Preliminary, not final
- Contaminant and media specific
- Risk based (generic scenarios)
- Usually do not consider
 - ▶ Site specifics
 - ▶ Technical Feasibility
 - ▶ Schedule
 - ▶ Resources
 - ▶ Costs
 - ▶ Regulations
 - ▶ Background
- Used as screening
- Very Conservative

RGs

- Final Remediation Goal
- Contaminant and media specific
- Must consider
 - ▶ Site Specifics
 - ▶ Technical Feasibility
 - ▶ Resources
 - ▶ Regulations (may not be risk based)
 - ▶ Risk
- Used to determine if site meets remedial action objectives



Summary

- Remediation Goals
 - ▶ Risk-based (site-specific calculations) or ARARs (regulations)
 - ▶ Remediation goals will be different from site to site
 - ▶ Background impacts
 - Background levels are ranges, not a single number
 - Vary from site to site
- Preliminary Remediation Goals
 - ▶ Screening only, used to determine if additional investigation is required
 - ▶ Intended to be very conservative



Summary

- What is a safe level of Radiation?
 - ▶ Radiation exposure occurs every day to every one
 - ▶ Regulations are conservatively based on the assumption that any exposure to radiation results in some risk
 - ▶ Regulatory approach is to state in terms of “acceptable risk”
 - ▶ Regulations define 1 in 10,000 increased chance of getting cancer as “acceptable risk”

- How is it determined if a site requires remediation?
 - ▶ Risk Assessment - who is exposed, what they are exposed to, how much they are exposed to, & how they are exposed
 - ▶ Risk Assessment results > 1 in 10,000 may require action



Questions?



DOE MO Background Study

Table 19. Background radiation levels and nuclide concentrations in surface soil samples in the State of Missouri

| Sample designation | Description of sample location | Average external gamma exposure rate ($\mu\text{R/h}$) ^a | Nuclide concentration in surface soil (pCi/g) ^b | | |
|--------------------|--|---|---|-------------------|------------------|
| | | | ²²⁶ Ra | ²³² Th | ²³⁸ U |
| MO-1 | Approx. 45 km E of Kansas City, Missouri, in pasture field on S side of I-70 | 6.0 | 1.4 ± 0.04 | 1.3 ± 0.10 | 1.7 |
| MO-2 | Approx. 140 km E of Kansas City, Missouri, at intersection of I-70 and exit J, SE corner | 10 | 1.3 ± 0.06 | 1.2 ± 0.10 | 1.3 |
| MO-3 | Rest stop on S side of I-70, ~16 km E of Williamsburg, Missouri | 6.7 | 1.1 ± 0.06 | 1.0 ± 0.08 | 1.2 |
| MO-4 | SE corner of intersection of Hwy 175 and I-70 in O'Fallon, Missouri | 7.5 | 1.3 ± 0.08 | 1.1 ± 0.12 | 1.1 |
| MO-5 | Approx. 34 km N of Missouri-Arkansas border, on E side of I-55, mile marker 21 | 8.1 | 1.2 ± 0.04 | 1.2 ± 0.06 | 1.3 |
| MO-6 | E side of I-55, ~14 km N of intersection with Hwy Alt. 61, at mile marker 76 | 5.4 | 0.31 ± 0.04 | 0.32 ± 0.04 | 0.33 |
| MO-7 | E side of I-55, ~1.6 km S of Appleton exit, E of Friedheim, Missouri | 7.6 | 1.1 ± 0.06 | 1.1 ± 0.06 | 1.1 |
| MO-8 | Exit 0 off I-55, near Bloomsdale, Missouri | 6.8 | 0.83 ± 0.04 | 0.76 ± 0.06 | 0.81 |
| MO-9 | E side of I-55, ~0.4 km S of Hwy 141 intersection, Maxville, Missouri | 5.1 | 1.1 ± 0.06 | 1.1 ± 0.06 | 1.1 |
| MO-10 | W side of Hwy 367, ~0.3 km S of intersection with Hwy 67, N of St. Louis, Missouri | 4.6 | 1.0 ± 0.10 | 0.95 ± 0.14 | 0.76 |

^aExposure rate determined from 3 to 4 measurements at each location using a "Phil" tube as described in Appendix I.

^bStandard deviation of ²²⁶Ra and ²³²Th measurements are given as the 2 σ value. Error in the ²³⁸U measurements are $\leq 5\%$ (2 σ).

DOE MO Background Study

| Sample | gamma exposure rate | Ra226 | Th232 | U238 |
|---------------------------|---------------------|------------|------------|------------|
| MO-1 | 6.0 | 1.4 | 1.3 | 1.7 |
| MO-2 | 10.0 | 1.3 | 1.2 | 1.3 |
| MO-3 | 6.7 | 1.1 | 1.0 | 1.2 |
| MO-4 | 7.5 | 1.3 | 1.1 | 1.1 |
| MO-5 | 8.1 | 1.2 | 1.2 | 1.3 |
| MO-6 | 5.4 | 0.3 | 0.3 | 0.3 |
| MO-7 | 7.6 | 1.1 | 1.1 | 1.1 |
| MO-8 | 6.8 | 0.8 | 0.8 | 0.8 |
| MO-9 | 5.1 | 1.1 | 1.1 | 1.1 |
| MO-10 | 4.6 | 1.0 | 1.0 | 0.8 |
| Min | 4.6 | 0.3 | 0.3 | 0.3 |
| Median | 6.8 | 1.1 | 1.1 | 1.1 |
| Mean | 6.8 | 1.1 | 1.0 | 1.1 |
| Max | 10.0 | 1.4 | 1.3 | 1.7 |
| Standard Deviation | 1.6 | 0.3 | 0.3 | 0.4 |
| Mean + 2 SD | 10.0 | 1.7 | 1.6 | 1.8 |



Radioactivity in Common Materials

| Building Materials | Ra-226 (pCi/g) | Th-232 (pCi/g) | K-40 (pCi/g) |
|-------------------------------------|-------------------------|-------------------------|-----------------------|
| Concrete | 0.0 - 7.5 | 0.0 - 5.7 | 0.2 - 47.1 |
| Aerated concrete | 0.3 - 25.0 | 0.0 - 6.6 | 5.4 - 48.0 |
| Clay bricks | 0.0 - 6.0 | 0.0 - 6.0 | 1.8 - 60.0 |
| Sand-lime bricks and sandstone | 1.0 - 12.0 | 0.3 - 28.8 | 0.2 - 21.0 |
| Natural building stones | 0.0 - 15.0 | 0.0 - 9.3 | 2.3 - 210.3 |
| Natural gypsum | 0.0 - 2.0 | 0.0 - 3.0 | 0.2 - 8.4 |
| Cement | 0.2 - 6.0 | 0.2 - 7.0 | 0.7 - 25.5 |
| Tiles | 1.0 - 6.0 | 0.6 - 6.0 | 4.8 - 42.3 |
| Phosphogypsum | 0.0 - 21.0 | 0.6 - 10.8 | 0.8 - 3.6 |
| Blast furnace slag stone and cement | 1.0 - 4.0 | 0.9 - 6.6 | - |
| Fertilizers | U-238 (pCi/g) | Ra-226 (pCi/g) | Th-232 (pCi/g) |
| PK fertilizer | 12.3 | 11.1 | 0.5 |
| NP fertilizer | 27.6 | 9.3 | 0.9 |
| NPK fertilizer | 13.2 - 14.1 | 6.3 - 8.1 | 0.5 |
| NORM in Coal Ash | Total Ra (pCi/g) | Total Th (pCi/g) | |
| Hungarian Coal | 6.0 - 60.0 | 0.6 - 9.0 | |
| USA Coal | 3.0 - 18.0 | 0.9 - 9.0 | |
| German Coal | 2.0 - 7.4 | 2.3 - 5.1 | |



Background Variability

| City | Millirads per 30 years | City | Millirads per 30 years |
|--------------------|---------------------------|-------------------------|---------------------------|
| Harrisburg, Pa. | 2640 | Denver, Colo. | 4410 |
| Pittsburgh, Pa. | 2880 | Colorado Springs, Colo. | 5040 |
| Cleveland, O. | 2730 | Grand Junction, Colo. | 4140 |
| Toledo, O. | 2280 | Albuquerque, N.M. | 3480 |
| Chicago, Ill. | 2640 | Amarillo, Tex. | 3240 |
| Madison, Wis. | 2520 | Oklahoma City, Okla. | 2520 |
| Minneapolis, Minn. | 2760 | Tulsa, Okla. | 2760 |
| Sioux Falls, S.D. | 2850 | Little Rock, Ark. | 3180 |
| Cheyenne, Wyo. | 4260 | Memphis, Tenn. | 2850 |

Table 1-2. Background radiation levels (including cosmic radiation) in millirads per 30 years, in some cities of the United States.

